



Plug Technologies, Inc. ("PTI")


855-758-4489

www.plugtechinc.com

**Plug  
Peddler  
Quick Tip!**

**Connecting a PTI FatBoy Tester™ to a triple hose (blue) with a ½" Foster coupler.**

Install a PN: 32-040 into (blue) test port of the FatBoy Tester™ and install a 33-004 into the 32-040. Use thread tape on all fittings to prevent leaks. The bushing reduces the port from ¾" down to ½" and allows for the acceptance of the ½" Foster nipple. The red and yellow ports (¼" QD nipple) will remain the same and connect to the red and yellow hoses of the triple hose.

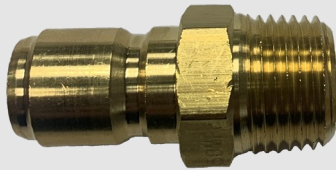

PN: 33-004

Description: ½" Foster  
Nipple x ½" NPT (male)



PN:32-040

Description: Bushing  
3/4" NPT (male) x ½"  
NPT (female)



**Connecting a PTI triple hose by adapting a plugs ½" bypass port to accept a ¾" Foster nipple.**

Install a 32-013 into the plug's ½" bypass port (blue) and install a 33-011 into the 32-013 to allow it to be connected to a Plug Technologies, Inc. triple (blue) hose using a ¾" Foster nipple. Use thread tape on all fittings to prevent leaks. The adapter allows the ½" port (blue) or (green) to accept the larger ¾" Foster fitting. The red and yellow ports (¼" QD nipple) will remain the same and connect to the red and yellow hoses of the triple hose.



PN: 33-011

Description: ¾" Foster  
nipple x ¾" NPT (male)



PN:32-013

Description: Reducer 3/4" NPT  
(female) x ½" NPT (male)